

ViewSonic[®]




PX706HD
USB-C Firmware Update
User Guide

Download Tool Required

1. Hardware:

- a) Projector
- b) PC/Notebook with USB type A/USB type C port
- c) USB type A to USB type C cable OR USB type C to USB type C cable

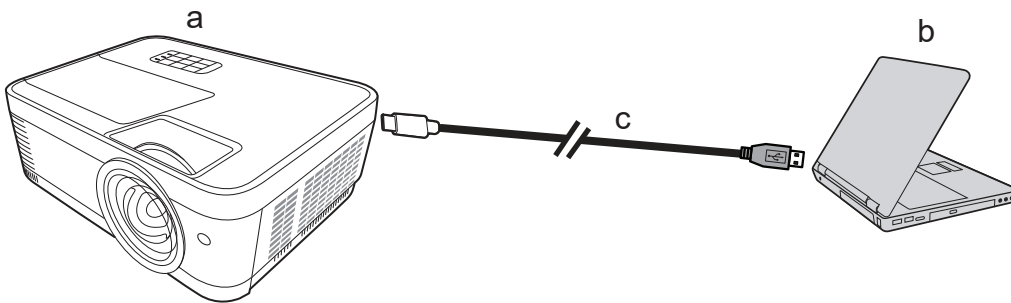

2. Software:

PX706HD_USB-C FW_v3.0.0

(* You can download the software file on Viewsonic's official website and check product's "Support & Downloads" section)

3. Windows:

Windows 7, Windows 8.1 or Windows 10


(* This firmware updating software only supports Windows system.)

Firmware Update Process


Step 1. Turn on projector

Step 2. Connect PC/Notebook and Projector through cable


Step 3. Unzip “PX706HD USB-C firmware” and Execute “ITESHFU.exe”

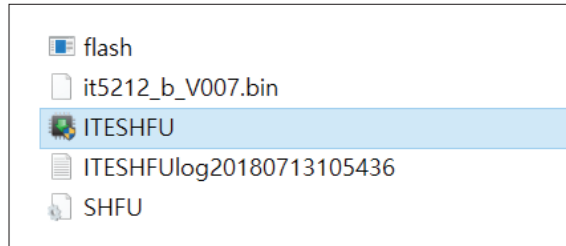


Step 4. Click “Yes” to continue the download

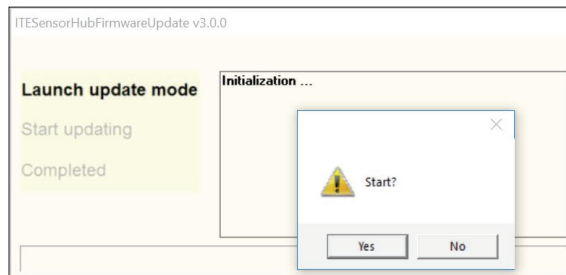

Note: If the cable is not connected well, it will show the error message as shown below. Please double check and reconnect the cable.

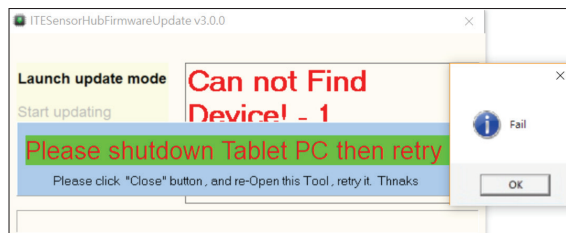


Step 5. Firmware Updating

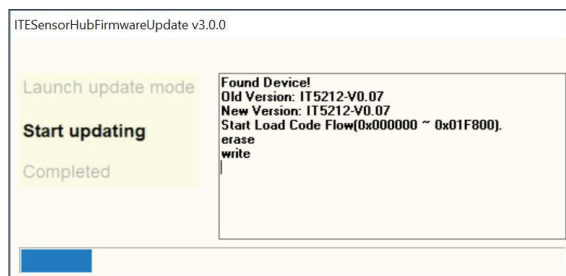

Step 6. Updating Completed

* When the updating is completed, there is no need to restart any devices (PC/Notebook or Projector).

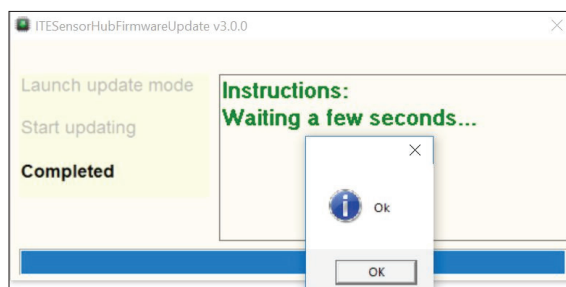



ViewSonic®